DVB-S

User's manual

DVB-S Introduction

1.1 product Introduction

DVB-S can implement IP data decoding and MPEG-2 A/V decoding. DVB-S can be widely used in software download, fast accessing internet, distance education, distance treatment, distance shopping, newspaper transmission system, video conference, and VOD, etc. DVB-S is based on an open system, supporting upgrade either from local disc or from internet.

Note: This manual is only used for DVB-S product.

1.2 Features

Fully compliant with DVB-DATA ETSI/EN 301 192 standard Fully compliant with supports DVB-S Protocol (EN 300 744) /MPEG-2

Support USB 2.0 Hi-Speed

Input frequency: 950 MHz ~ 2150 MHz

Symbol rate: 2~ 45 MS/s

Compliant with TCP/IP, UDP protocol

High-speed data download with FTP,HTTP and SMTP protocol

Support for IP unicast and multicast

Support DiSEqC1.0/1.2 protocol

Max. 32PIDs can be decoded simultaneously


Support Electronic Program Guide (Wi	indowsXP :Recommended)
Support Multi-channel Recording	
Support TS Stream Recording	
Support Scheduler and Scheduler Play	
Support Parent Lock	
Support SDTV/HDTV	
Support Real Time Digital Video Record	ing (DVR)
Support IR-Remote Controller	
LNB Power Supply: 13/18V <400mA	
(Note: Some features are only provided by co	ontent provider, be sure
to check if your content provider supports the	em or not.)

1.3 System Requirements

IBM PC compatible: Pentium III 667MHz or higher 128MBytes memory or more 32MBytes display memory or more Hard Disk free space of 500MBytes or more OS supported:Windows2000 for SP4/WindowsXP for SP2

Hardware installations:

- Connect the USB port of PC and DVB-S with USB cable
 Connect satellite signal to DVB-S
- 3, Connect power socket and power on

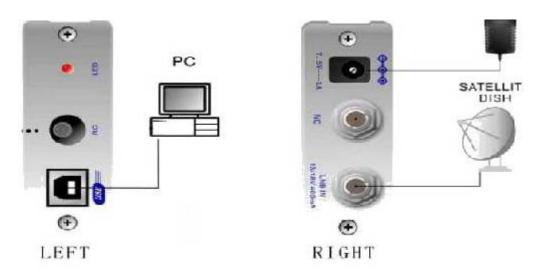

4, You will see the following New Hardware Found Wizard, choose "not this time" then click "next":

Found New Hardware Wiz	card Card
	Welcome to the Found New Hardware Wizard Windows will search for current and updated software by looking on your computer, on the hardware installation CD, or on the Windows Update Web site (with your permission). Read our privacy policy
	Can Windows connect to Windows Update to search for software? Yes, this time only Yes, now and every time I connect a device No, not this time
and the second	Click Next to continue.
	< Back Next > Cancel

5.	Choose	one of	the two	wav ir	n following	wizard.	then	click	"next"
ς,	0110000	0110 01		way n	rionoming	wizaia,	u ion	onon	110/11

Found New Hardware Wiz	ard
	This wizard helps you install software for: LME_BDA_DVBS If your hardware came with an installation CD or floppy disk, insert it now. What do you want the wizard to do? O Install the software automatically (Recommended) O Install from a list or specific location (Advanced)
	Click Next to continue.

6, Choose the way as following wizard, then click "next"

Please c	hoose your search and installation options.
⊙ Se	arch for the best driver in these locations.
	e the check boxes below to limit or expand the default search, which includes local hs and removable media. The best driver found will be installed.
	Search removable media (floppy, CD-ROM)
	Include this location in the search:
	E:\Documents and Settings\Administrator\Desktop\ 🖌 Browse
ODo	n't search. I will choose the driver to install.
	pose this option to select the device driver from a list. Windows does not guarantee driver you choose will be the best match for your hardware.

7, Just click "Continue Anyway" when you see following wizard

	Hardware Installation
6	The software you are installing for this hardware:
	LME_BDA_DVBS
	has not passed Windows Logo testing to verify its compatibility with Windows XP. (<u>Tell me why this testing is important.</u>)
	Continuing your installation of this software may impai or destabilize the correct operation of your system either immediately or in the future. Microsoft strongly recommends that you stop this installation now and contact the hardware vendor for software that has passed Windows Logo testing.

8, Click "Finish" to complete the installing



9, You will see a device "LME_DBA_DVBS" in your device Manager

Software Installations and Introductions:

. Overview

1.1 Introduction

BlazeVideo HDTV Player is a full-featured Digital & Analog TV software solution for you to watch, record, pause, replay live TV show, Teletext broadcast and digital radio on PC. Compliant with both DVB-T, DVB-S Digital TV standard and PAL, NTSC, SECAM Analog TV standard, it supports most popular TV tuner with BDA interface on market.

BlazeVideo HDTV Player also acts as your multi-media center with superior video and audio quality, supporting DVD and most popular media files playback. The more advanced features, such as DVD bookmark, video capture, photo slideshow, special audio effect, bring you an infinite wonderful multi-media entertainment.

1.2 Features

Full-featured Digital & Analog TV Solutions

- Watch, record, pause, replay TV show
- Intelligent EPG guides you through what and when to watch (DTV only)
- TimeShift to pause live TV shows for a break or skip commercial (DTV only)
- Smart search to quickly locate favorite TV shows or desired TV Show time
- Search filter helps to display program by time or by type
- Remind to watch at scheduled time
- Auto & manually scan all available channels
- Display subtitle, support multiple language & audio channels
- Freely manage favorite TV channels, rename TV channels
- Multi-channel preview to quickly access favorite programs
- Wide compatibility, support both DVB-T, DVB-S Digital TV standard and PAL, NTSC, SECAM Analog TV standard

Advanced Personal Recording (Digital & Analog TV)

- Record as video or audio file in hard disk, play them in full original quality!
- Real-time record while watching live TV show
- Scheduled record, never miss any wonderful TV shows

• Auto wakeup to perform scheduled task at PC hibernation status

Still Image Capture

- Capture Digital or Analog TV show as still image
- Capture DVD video as still image
- Capture MPEG video as still image

Powerful Media Center

- Play DVD/SVCD/VCD/CD disc
- Play most popular media files
- DVD bookmark preview
- High Definition & Crystal Clear Video Quality
- Superior Audio Quality

Listen to Digital Radio

- Enjoy digital radio in Visualization mode. The audio effect is near CD quality.
- Create favorite radio stations for convenient listening
- Smart search digital radio program by time
- Rename radio stations

View Digital Teletext

Receive Composite or S-Video Signal

Advanced power saving scheme for Notebook PC

1.3 System Requirements

	Basic
CPU	Intel Celeron 600MHz or higher
System Memory	128MB RAM or higher
Operating System	Windows 98 SE/ME/ 2000/ XP
Display Card	Have 24 Bits resolution and support DirectX, 8MB Video-ROM or more

Sound Card	PCI sound cards, Integration chipset on Mother Board, USB audio devices etc. compatible with Windows and stereo speakers
	All DVD drives;
Device	Digital or Analog TV tuner and its driver should be properly installed for TV watching
Hard-disk Available Capacity	At least 512 MB temporary space for TimeShifting; Large enough space for TV record
DirectX	DirectX 9.0 or later

. Appearance & Menus





Button/Icon	Name	Description
	EPG	Open HDTV EPG window

 	Play	Play TV show or Media
	TimeShift/Pause	TimeShift (for Digital TV) or pause playback
	Stop	Stop playback
	Record	Record TV show
	Previous	Skip to play previous TV channel / DVD chapter
	Browse	Browse channel
	Next	Skip to play next TV channel / DVD chapter
	Open	Select playback type
	Subtitles	Select Subtitles
	Audio	Select Audio
	Capture	Capture video as .bmp still image
10	Volume Control	Drag slider bar to adjust volume
	Mute	Turn on/off audio
	Media Type	Display playback type
	Playback status	Display playback status
	Signal Quality	Display HDTV signal quality
	Signal Strength	Display HDTV signal strength
	Channel/chapter	Display current TV channel / DVD chapter
	Time	Display current time of TV / DVD
	Fast backward	Fast backward, switch between 1X, 2X, 4X, 8X, 16X at each press
	Slider bar	Drag the slider to new position for playback.
	Fast Forward	Fast forward, switch between 1X, 2X, 4X, 8X, 16X at each press
	On an Election Denal	Show Floating Panel
	Open Floating Panel	Show Hoating Faher

. Operation Guide

BlazeVideo HDTV Player features very easy usage, below we just guide you through the TV operation, for DVD and medial files playback, please refer to the Help file attached with the software.

3.1 Scan Channels

3.1.1 Scan DVB-S Channels

1. Choose Satellite :

If a DVB-S tuner installed on your PC, when first launch BlazeVideo HDTV Player, or when you click "Add" button in the scan dialog box, below dialog box will popup for you to choose satellite. Please select your desired satellite according to antenna's orientation, then click "OK" button.

Select a Satell	ite	
Satellites		-
3.0 Telecom 108.2 AAP 1 110.0 BSAT 110.1 Josat 1 110.5 Sinosa 113.0 Palapa 113.1 Koreas 116.0 Koreas 120.0 Thaico 124.0 Josat 4		
124.0 JCsat 4 128.0 Jcsat 3 134.0 Apstar 138.0 Apstar 140.0 Gorizor 144.0 Superb 145.0 Gorizor 146.0 Agila 2	1 1A 1 1t 22 irid C nt 33	in the second seco
148.0 Measa 150.0 Josat 1 152.0 Optus 1 154.0 Josat 2 156.0 Optus 1 158.0 Superb 160.0 Optus 1 166.0 Panam 169.0 Panam 174.0 Intelsal 177.0 Intelsal 203.0 EchoS 212.0 Echost	t 2 B B3 YA C1 ird A2 B1 sat 8 sat 2 t 802 t 702 t 701 tar 4	

2. Set LNB:

After you choose a satellite for the first time setup, or when you click "Setup" button in the Scan box, below dialog box will popup:

ind Satellite Transpon	der
Satellite:	Agila 2
LNB	
LNB1	Setup <u>I</u> est
LNB1 - LNB Frequer	ncy:11300
Drive Motor	
	Steps, 0-nostop
Drive <u>E</u> ast	0 C Drive West Stop Moving
Limit	
Set E <u>a</u> st Limit	Set We <u>s</u> t Limit <u>C</u> ancel Limit
Positions	
Save <u>P</u> osition	<u>Goto Position</u> Goto Zero
Strength:	8%
Quality:	0%

Click "Setup" button to popup below dialog box

OVB-S	0
.NB1 LNB Type: Custom	
LNB Type: Custom LOF1(MHz): 11300	
LOF2(MHz):	

- 1. There are 4 types LNB which can be identified according to the label.
 - Ku-L Band
 - LOF1: 9750MHz
 - LOF2: 10600MHz
 - Ku-C Band LOF1: 10750MHz LOF2: 0MHz
 - C Band LOF1: 5150MHz LOF2: 0MHz
 - Custom LOF1: 11300MHz(default)
 - LOF2: 0MHz(default)
- 2. LNB Switch Type: drop-down to choose one LNB if there are not only one LNB. Users can set frequency of the selected LNB. There are 4 setting modes
 - Default set as None, only one LNB, unnecessary to choose;
 - 22KHz, to switch between 2 LNBs;
 - Mini DISEqC (Mini DiSEqC or Simple DiSEqC), power consumption less than 22KHz, to switch between 2 LNBs;
 - DiSEqC 1.0/2.0, to switch among 4 LNBs.

Mote: Please set the right LNB frequency, otherwise you will fail to receive the satellite signal. If only one LNB, please keep the dafault value.

3. Set Transponder

Frequency of each Transponder is relative fixed. You can access each Transponder information on the relative satellite operator's website. There are some satellites' transponder in BlazeVideo HDTV Player, but the validity and integrality may be uncertain. Below is the Transponder setting box:

12301	Agil	32					
Frequency 12301							
Frequency 12301	Polarity						_
12301		Symbol Rate					1
	H V	25600 14000					
12581	H	25600 25600 25600					
Text			T die	Doloto	٦		
<u>I</u> est		w	<u>E</u> dit	<u>D</u> elete			
Strength:				30%			
Quality:				60%			
		1000		 			

• **Test**: Test the selected transponder. If locked successfully, below dialog box will popup. Signal strength and quality will also be displayed in green color with the percent number.



If the transponder is not locked, below dialog box will popup. Signal strength and quality will be displayed in red color.

Blaz	eDTV	X
No	Lock!	
	ОК	

• **New**: add transponder. click "New" button, type Frequency, Symbol Rate, Polarity and FEC. All of these parameters can be accessed in the relative website.

Frequency(MHz):	12501	
Symbol Rate:	30000	
FEC:	3/4	~
Polarity:	Horizontal/Left	(Hig 💙

- **Edit**: Edit the selected transponder, click to popup above dialog box for you to modify the parameter.
- **Delete**: Delete the selected transponder.

4. Search Satellite and Drive Motor

Before scanning channels, please make sure the satellite antenna has rightly aimed at the target satellite. The installation of polar axis supporting DiSEqC 1.2 or higher on satellite antenna is necessary, and only when the satellite supports the command DiSEqC 1.2 or higher, you can drive the motor of antenna. You can only drive the orientation angle, the polarity angle and elevation angle should be manually adjusted.

Note: Please see the relative document for the operation details of how to rightly aim antenna to satellite.

Please see below how to drive motor:

- Drive East drive antenna to east with the preset Step value, "0" means continuously drive to east.
- o Drive West drive antenna to west with the preset Step value, "0" means continuously drive to west.
- Set East Limit set the east limit value, if motor drives to the limit value, it will auto stop driving.
- Set West Limit Similar as "Set East Limit".
- Save Position Save present position of the antenna.
- Goto Position Go to last saved position of the antenna.
- Cancel Limit Cancel east limit and west limit.
- Goto Zero Drive antenna to zero position.

5. Scan Channel

After you aim at the target satellite and set the right LNB and frequecny, you will begin to scan channel. The scan box is as below:

Satellites				1
146.0 Agila 2> LNB1 <u>N</u> ew	<u>S</u> etup	Delete	Goto S	at
Transponders				
12661-H-25600				~
T <u>e</u> st	Scan <u>I</u> P			
trength:		30%		
luality:		60%		

Satellite tab: show the binding relationship of LNB and satellite. A LNB can be binded with several satellites, but the antenna position of each satellite should be saved, thus the antenna will be rotated to the relative satellite positon when switch channel between different satellites.

- New: add binding relationship of LNB and satellite, click to popup dialog box to add satellite.
- **Setup**: set LNB and transponder, to popup dialog box of searching satellite and transponder.
- **Delete**: delete binding relationship of LNB and satellite. The added or modified transponder info will also be deleted.
- **Goto Sat**: rotate antenna to the selected satellite. The satellite position should be saved in advance, otherwise this feature will be inactive.

Transponder tab: show all transponders supported by present LNB.

- Test: test signal of the selected transponder. click to popup box showing locked or unlocked. Signal Strength and Quality will also be shown with percent number. green color for locked, red color for unlocked.
- Scan TP: scan the channels of selected Transponder.
- Scan All: scan channels of all Transponder in satellite.

Below dialog box will popup while scanning channels, all scanned channels will be added into channel list after finishing scanning.

Scanning Channels	
20 channels found	
Current frequency: 12541.0 MHz	
Start to search channel	
<u>Preview found channels.</u>	
40%	
Abort	

B. Manually Scan Channels

- In TV Advanced Panel click
- In EPG Channels window click •
- Go to Options-> DTV window, click "Scan" button under "DTV Source". •

C. Abort Scanning:

Just press "Abort" button to stop scanning. (It is recommended you finish scanning one time at least).

3.1.2 Scan Analog TV Channels

. the Go to Options->Play from, select the analog TV tuner connected to your PC as source, then click scan button local analog TV channels will be scanned and real-timely displayed on video screen. For detailed Analog TV setting, please see 4.2 Analog TV Setting.

3.1.3 Rename Channels:

After finishing scanning, the received channels will be displayed in EPG_Channels window. Right click a channel and select "Properties", you can type your desired channel name in the Channel Name box to freely rename channels.

3.2 Watch Live TV Show

Select Channel: In EPG_Channels window, double click a desired channel; or click with to open channel list to select.



Switch Channel: click or to switch channel.

Browse Channel: Click with to open channel list, all of the channels will be displayed.

Return to Last Channel: Click 2 to resume play the last viewed channel.

Select Subtitle: Click while to select your desired subtitle.

Select Audio: Click with to select your desired audio.

3.3 TimeShift (DTV only)

TimeShift means you can pause watching a live program to have a break, when you come back you will resume watching from the point at which you paused.

- Click we to pause, the video screen will freeze, but the recording will continue.
- Click W again or click W to continue watching TV show from the point at which it was paused.
- Double click **W** to stop TimeShift and return to the live program.



I Note: The record duration depends on your TimeShift Buffer Size, which can be set in <u>4.1 DTV Setting</u>.

3.4 EPG (DTV only)

In EPG_Guide panel, click a program to access program details: program title, start time, end time and program description.

Note: This feature may not be available, local DTV service dependent, please contact service supplier for the availability.

Search	
search	- T.
Time	Program
10.21 11:55	Ettans morgon-tv 🗜
10.21 12:00	Ettans morgon-tv
10.21 15:15	I v錼 herres hage
10.21 15:15	Uutisp鋓v
10.21 16:00	Euronews
10.21 16:10	Finsk skol-tv: Nyhet
10.21 16:10	A-studio: Studio-Su
10.21 16:25	Finsk skol-tv: Rome
10.21 17:00	Tv-nyheter
10.21 17:00	Tv-nyheter
10.21 17:00	Popstudio
10.21 17:05	Lauantaivekkari
10.21 18:00	Distansgymnasiet: (
10.21 18:00	Euronews
10.21 18:00	P鋓v鋕lassinen. 🦷
itle: Lauantaivek tart time: 2004-10 nd time: 2004-10 teccription: Mit2k	0-21 17:05:00
ittyy? Kari Ky鰊si projektip滗llikk?M	aikkea autosuhteeseen epp? Vekkarikutsujana arkus Talvio, kutsuttuna a 峰etuksest?suorana

3.4.1 Smart Search:

Type the start time or keyword of your desired programs in Search box, all the relative program guide will be displayed.

3.4.2 Search Filter:

Click to eject search filter, here you can freely select different search filter to display different TV programs. You can search by time, by type (Free to Air or Scrambled), (TV or Radio).

~	Disable Filter	
	All Time	
	Now	
	Next Program	
	Today	
	Tonight	
	Channel	
	Both	
	Free to Air	
	Scrambled	
	Both	
	TV	
	Radio	

3.4.3 Refresh EPG

Click I to refresh EPG, you will get the latest program guide of all the channels.

3.5 Record TV Show

You can freely record digital or analog TV show. You can freely stop record, play record or delete record file in the record panel.

• Record video & audio: In Options_Record window, select record type as Video & Audio;

Mote: The recorded video may be different type, you will record digital TV show as MPEG2 video, record analog TV show as ASF video.

 Record audio only: In Options_Record window, select record type as Audio Only. All the recorded audio will be MP3 format.

For details, please see <u>4.3 Record Setting</u>.

3.5.1 Live Record

Just click 🖤 while you are watching a TV show, the Record floating panel ejects, you will begin to record live TV show.

3.5.2 Scheduled Record

Following 3.8 Create Schedule Task, set task type as "Recording File" and set task start time, it will auto record the preset TV show by the task start time, even though you are away from PC or your PC is hibernated.

3.5.3 Wake up Record

Your PC can be auto wakeup to perform schedule task in hibernation status for power saving, the operation is below:

1. Create record task, please refer to <u>3.6 Create Scheduled Task</u> for details.

2. Hibernate your PC.

Note: To hibernate your PC, you must activate "Enable Hibernation" in your PC's Power Options Properties.

3. Your PC will auto wake up to perform task at the scheduled time.

3.6 Create Scheduled Task

In EPG Schedule window, click

to create a task.

- In EPG_Channels window, select a program with EPG guide and click Add to Schedule
- In EPG_ Programs window, right click a program and select "Add to Schedule".

Through one of above steps to create a task and eject below Task box: here you can set task name, task type and

task time.

Task		
Task		ОК
Name:	Task 2	Cancel
Channel:	~	
Task Type		
 Recording File 		
Duration:	30 🔅 Minute(s)	
🔘 Viewing Reminde	r	
Task Time		
Time Start:	2005-10-28 13:31:33	
2005-10-28	13:31:33	

3.7 Reminded to Watch

You will be reminded to watch TV show at the schedule time, thus you will never miss any of your favorite program. Just set Task Type as Viewing Reminder when you create schedule task. The other operations are as schedule record TV.

3.8 Multi-channel Preview

- **Preview while scanning channels**: Tick "Preview found channels" box while scanning channels, each found channel will sequentially display on video window.____
- Multi-channel preview in EPG window: Click in EPG_Channels window to refresh channels, each program will display on video window by sequence, after refresh finishes, all programs' snapshot will be listed in EPG_Channels window. Double click a program, you will directly playback it.



3.9 Favorite Management

- Add to favorite: In EPG_Channels window, select a channel and click with or right click to add favorite.
- Watch favorite channel: double click the favorite channel to directly watch this channel's program.
- **Favorite management**: in EPG_Favorite window, you can freely create, rename, change or delete favorite folder.




3.10 Take Snapshot

Click to take snapshot, the captured image will display in Capture floating panel, default saved as .bmp file in "My Pictures" by sequence number 1, 2, 3, etc.

You can freely capture, preview, delete, copy or save the snapshot in Capture floating panel.

Note: This feature is only available for Digital & Analog TV, DVD movie and MPEG video.

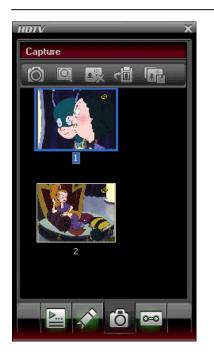

3.11 View Digital Teletext

Mote: This feature is activated only when DTV service provider has provided such service.

Display Teletext:

- Click and tick "Teletext" in popup menu.
- Click and tick "Show Teletext" in popup menu.

Go To: Go to specified teletext page, or press La, La to go to previous or next page.

Hold: Keep displaying current teletext during other operations.

Transparent: Display Teletext over the current video by transparent mode.

3.12 Listen to Digital Radio



In EPG_Channels window, the channel displayed with Radio type or marked with will be radio channel, Double click a radio channel you will begin to listen to radio, and the Visualization effect will be default activated, video window will display multi-colored shapes and patterns that change in harmony with the audio track being played.

3.13 Receive S-Video or Composite Signal

- 1. Go to Options->Analog TV, choose S-Video or Composite as video source
- 2. BlazeVideo HDTV Player will pick up the signals.

Note: This feature may not be available, the device specifications dependent. Please refer to the User Manual of your device.

3.14 Playback DVD & Media Files

BlazeVideo HDTV Player also acts as your multi-media center, with superior video and audio quality, it supports DVD, VCD, SVCD, and most popular media files playback. The more advanced features, such as video/audio record, video capture, bookmark preview, picture slideshow, screen control, special audio effect, bring you an infinite wonderful multi-media world.

. Settings

Right click Video window and click Options, you will open Options box for advanced setting, below we just guide you for DTV, Analog TV and Record setting.

and the second se	itrol	Appearance	Remote Co	ontrol	Information
General	DTV	Analog TV	Video	Audio	Record
DTV Source					
Device:		BDA 2870 TVTun	er	Er Er	operties
		Marine and a figure of the second second			<u>S</u> can
TimeShift (req	uires restart)				
Buffer File:		CUME~1\KARAL	I~1\LOCALS~1	\Temp\	Browse
Buffer Size:		512 🔮 мв			
EPG					
Days to keep	EPG history:	0 🛟 Da	/S		ear <u>H</u> istory
Browser					

4.1 DTV Setting

- Device: If a DVB tuner installed or connected to your PC, the device name will display.
- Scan: click to launch channel scanning
- TimeShift:
 - **Buffer File**: display the directory of buffer file, please select a directory with large enough space.
 - **Buffer Size**: Hard disk size for buffer and saving paused programs, the bigger size, the longer time of saving program.

Note: After you change the buffer file or buffer size, please restart the program to activate the change.

- Days to keep EPG history: Set the days to keep the EPG history, maximum 7 days to keep EPG history.
- **Clear History**: Delete the EPG history.
- Scroll browse programs: Selected to scroll browse programs after click

4.2 Analog TV Setting

Parental Control	Appearance	Remote Co	ntrol	Information
General DTV	Analog TV	Video	Audio	Record
Video		Audio		
Device:		Device:		
Analog TV: TV Capt	ire Card WDM V 🐱	Realtek AC97	7 Audio	~
Source:		Source:		
TV	~	Line In		~
Standard:				
PAL_D	~			
Signal		Country or Regi	on	
📀 Cable		China		~
O Antenna		Termine.		
Fine Tune				
	0			
	0			Default

- Video Device: List the connected analog TV tuner.
- Video Source: Generally set as TV.

TV: for analog TV watching.

Composite: for composite signal receiving.

S-Video: for S-Video signal receiving.

• Video Standard: The analog TV Standard in your location.

All analog TV Standards supported by your analog TV tuner will be listed in this box. The application will auto select the <u>TV</u> standard according to your country or region.

Mote: Please refer to your analog TV tuner specifications for what and how many TV standards to be supported.

Standard:	
PAL_D	~
NTSC_M NTSC_M_J PAL_B	
PAL_G PAL_G PAL_H PAL_I PAL_M	
PAL_N SECAM_B SECAM_D SECAM_G SECAM_H	
SECAM_K SECAM_K1 SECAM_L SECAM_L1	

• Audio Device: Please choose Realtek AC97 Audio or Audio Pin. Audio Pin may not be available, please check the specifications of your analog TV tuner.

- Audio Source: Please select the appropriate audio source, generally set as Line In.
- Signal: Please choose Cable or Antenna.
- Country or Region: Please select your currently located country or region in the drop list.
- Fine Tune: Drag the slide bar to get the best signal quality.

Note: If you have moved to another country or region, you should reset the country and video standard, otherwise you will fail to receive local TV signal.

4.3 Record Setting

Options					X
Parental Co	ntrol	Appearance	Remote Cont	rol	Information
General	DTV	Analog TV	Video	Audio	Record
Record Type Audio Only Audio Only		t)			~
Video & Au					
Save record f	ile to				
E:\My Doc		'ideo\BlazeDTV\Reco	rdFile		
				Locate o	n Disk
		(ок (Cancel	Help

Record Type:

- Audio Only: only record TV show audio as MP3 audio file
- Video & Audio: record TV show as video file.

Note: The recorded video may be different, you will record digital TV show as MPEG2 video, record analog TV show as ASF video.

Save Record File to: Specify the path to save the record file Locate on Disk: To quickly open the record file's folder

. Technical Support

5.1 Troubleshooting

Malfunction	Reason & Solution
Fail to scan digital TV channel	1. Make sure you have selected the right location;
	2. Expand frequency range
	3. Adjust off-center frequency
	4. Change parameter in Advanced Setting box
	5. Check for update, update application to the latest version.
No analog TV signal	1. Go to Options->Analog TV, check if you have rightly set the TV
	standard;
	Make sure you have selected the right country or region;
	3. Make sure signal received at your location;
	4. Change with another more sensitive antenna;
	5. Move to other place with strong density TV signals;
	6. Check for update, update application to latest version.
No signal in new country or region	Reset TV standard and country/region, then rescan channels
No EPG	May not be available, local DTV service dependent, please contact
	service supplier for the availability.
No Teletext	Same as above

No digital radio	Same as above
Blank screen for some channels	Current channel has no data stream, please rescan. <i>Tip: Please check the clock in Main Control Panel: if clock</i> <i>changes with time, there is data stream; otherwise, there will be no</i> <i>data stream.</i>
Can not record some channel's program	The channel adopts AC-3 audio encoding mode.

5.2. Contact Support

Please collect the following information and E-mail us. We will respond you as soon as possible:

- Product Order ID
- BlazeVideo HDTV Player's version number
- Windows Operating System's version
- Hardware configuration (sound card, VGA card, Image Capture card) and their specifications
- The warning message
- The time and process descriptions about your troubles.